



FEATURES

- Wireless keyboard with complete flat Gorilla® glass surface
- Excellent hygienic level, because it's washable and disinfectable
- Full key layout with integrated Touchpad
- 2.4 GHz wireless connection
- A LED indicator shows when the keyboard needs cleaning
- Volume and sensitivity are adjustable individually
- Key lock to disable the keyboard before cleaning
- Various designs are possible
- Rearside VESA mounting option
- Multi country AC adapter

TECHNICAL DATA

Housing type:	desktop keyboard	Storage temperature:	-40 °C to +65 °C
Switch technology:	capacitive	Enclosure material:	plastic
Number of keys:	103	Surface:	0.8 mm glass
Interface:	USB (USB Dongle, 2.4 GHz)	Keyboard dimensions:	470 x 167 x 25.4 mm
Cursor control:	touchpad	Special keys:	Keylock, Sensitivity, Volume
Protection level:	glass-side IP65	Certifications:	CE, FCC Part 15 Subpart B
Operating force:	0 N	System requirements:	Win®, MacOS® and Linux® *
Operating temperature:	0 °C to +60 °C		

ORDER INFORMATION


Cat.No.	Product description	Interface	Layout
KR24230	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-DE	USB	German
KR24231	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-US/EU	USB	US/EU English
KR25207	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-CH	USB	Switzerland
KR25209	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-CZ	USB	Czech
KR25205	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-FR	USB	French
KR25208	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-IT	USB	Italian
KR25206	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-SKAN	USB	Scandinavian
KR25211	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-UK	USB	UK
KR25210	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-US/ARAB	USB	US/Arab

Other language versions available on request.

* if OS and Hardware meet the requirements of USB2.0 compliance

Subject to modifications and errors

DIMENSIONAL DRAWING (in mm)

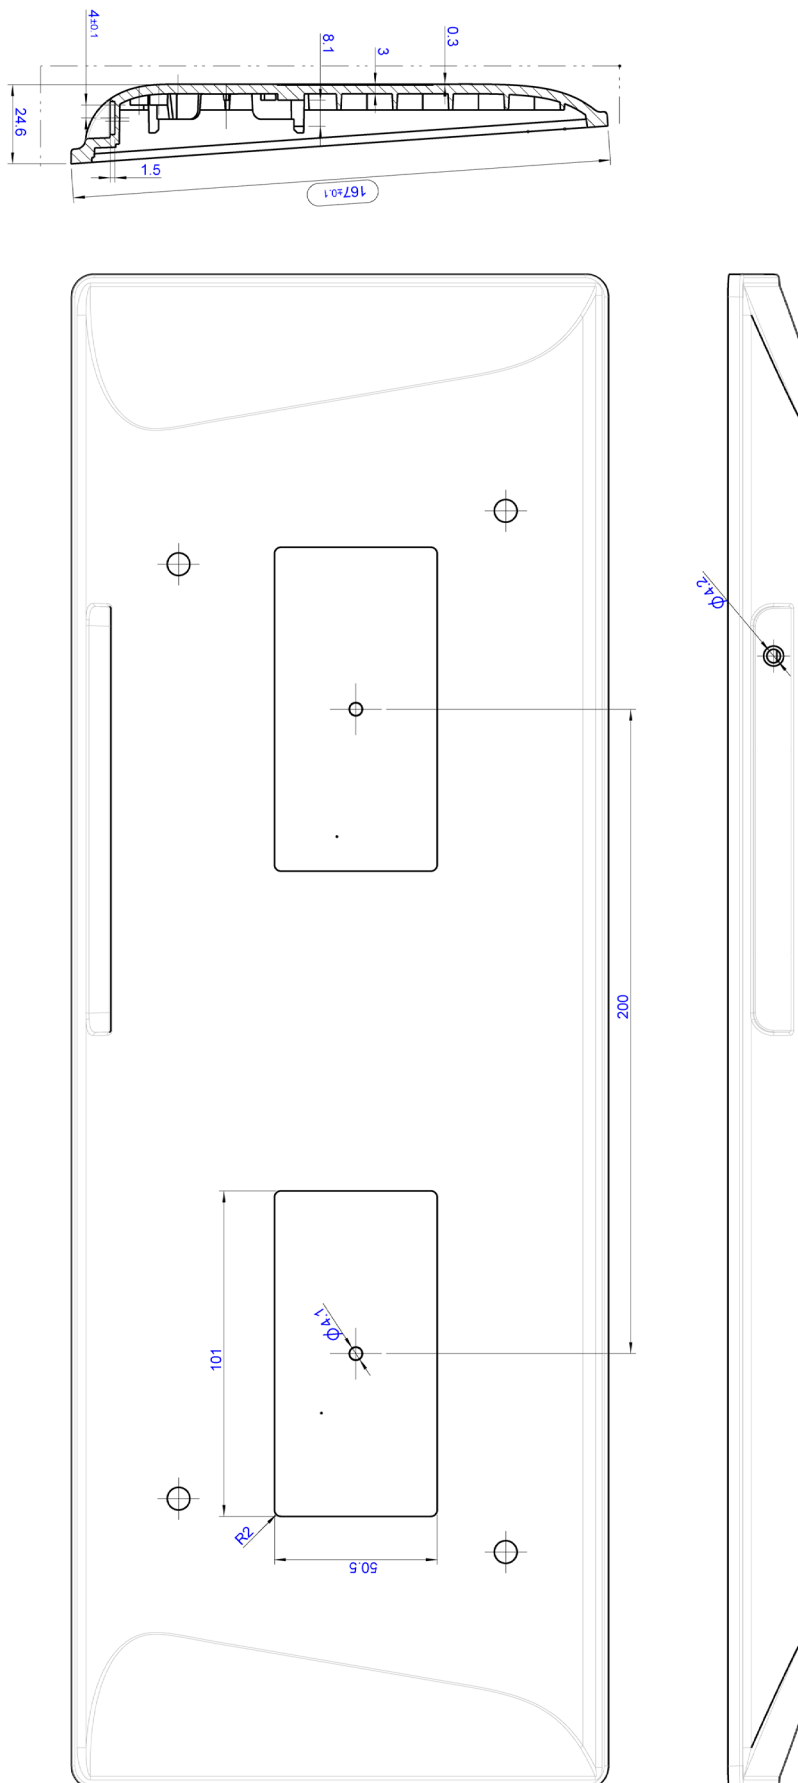

Subject to modifications and errors

GETT Gerätetechnik GmbH

Mittlerer Ring 1 | 08233 Treuen | Germany
 Tel: +49(0)37468-660-0
 Fax: +49(0)37468-660-66
 E-Mail: info@gett.de
 Internet: www.gett.de


Gett North America LLC

Suite 203M
 2323 S. Voss Road, Houston, TX 77057
 United States of America
 Tel: +832 649 7822
 E-Mail: info@gett-na.com
 Internet: www.gett-na.com

Gett Asia Ltd.


Unit 8, 5/F, CRE centre,
 No. 889 Cheung Sha Wan Road
 Kowloon, Hong Kong
 Tel: +852 3461 9789
 E-Mail: info@gett-asia.com
 Internet: www.gett-asia.com

KEY FUNCTIONS:

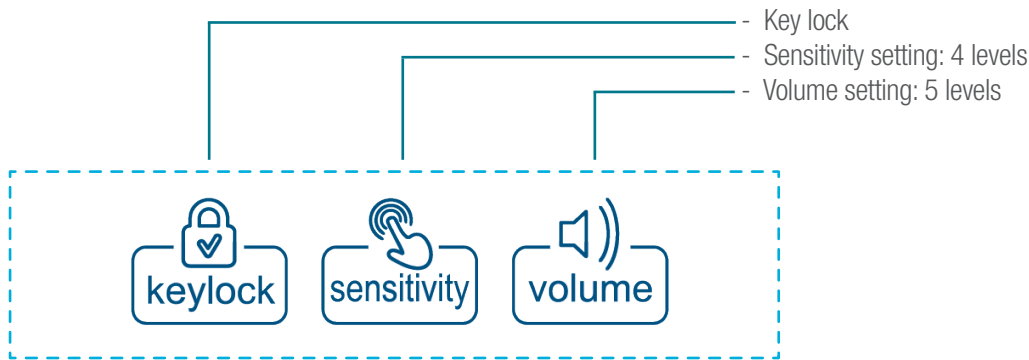


— — — - 8 LED chain to display the key lock and the settings for sensitivity and volume

The sensitivity can be set as follows (ascending):

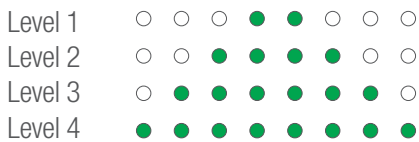

The volume can be set as follows (ascending):

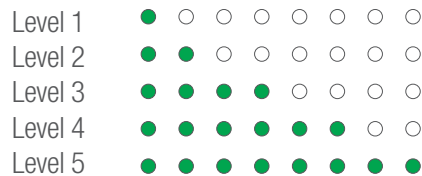

KEY LOCK FUNCTION

Press the key for approx. 2 seconds. This will cause the status display to flash; when it is permanently green, the keys are locked. To unlock the system, press the key for 2 seconds again and wait until the status LED goes off. The keys are then ready for use again.

CLEANING

You can clean the glass surface with normal cleaning and disinfecting agents. The chemical resistance of the glass surface may vary depending on the concentration of the solution and the particular environmental conditions. We therefore recommend that you carefully check your cleaning and disinfecting agents to see how they affect glass surfaces.

INDIVIDUAL MODIFICATIONS

- Adding a Logo/Brand (1-4 colours)
- New country layout
- Individual GUI design
- Reducing the keyboard cable length
- Changing of the keytable (HID-Standard)